

Click for
Table of Contents

x

Contents

UniFi Switch



Mounting Screws (Qty. 2)



Screw Anchors (Qty. 2)



Power Adapter



Power Cord

System Requirements


- Linux, Mac OS X, or Microsoft Windows 7/8/10
- Java Runtime Environment 1.8 or above recommended
- Web Browser: Google Chrome (Other browsers may have limited functionality)
- UniFi Controller software v5.3.x (or newer), available at: ui.com/download/unifi



IMPORTANT: We strongly recommend using UPS backup and power regulation to prevent equipment damage due to stability issues with local AC power.

Hardware Overview

Front Panel

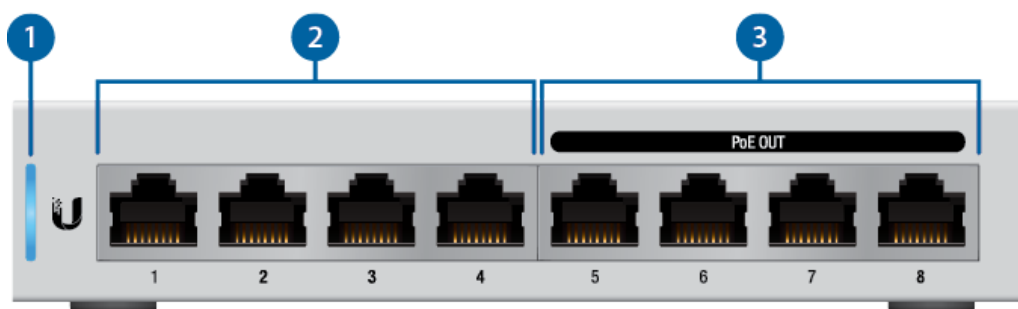

[Click here](#) for detailed descriptions.

Click for
Table of Contents

×


- 4)

RJ45 ports support 10/100/1000 Ethernet connections.

3 RJ45 (Ports 5 - 8)

RJ45 ports support 10/100/1000 Ethernet connections and auto-sensing 802.3af PoE.

Top Panel

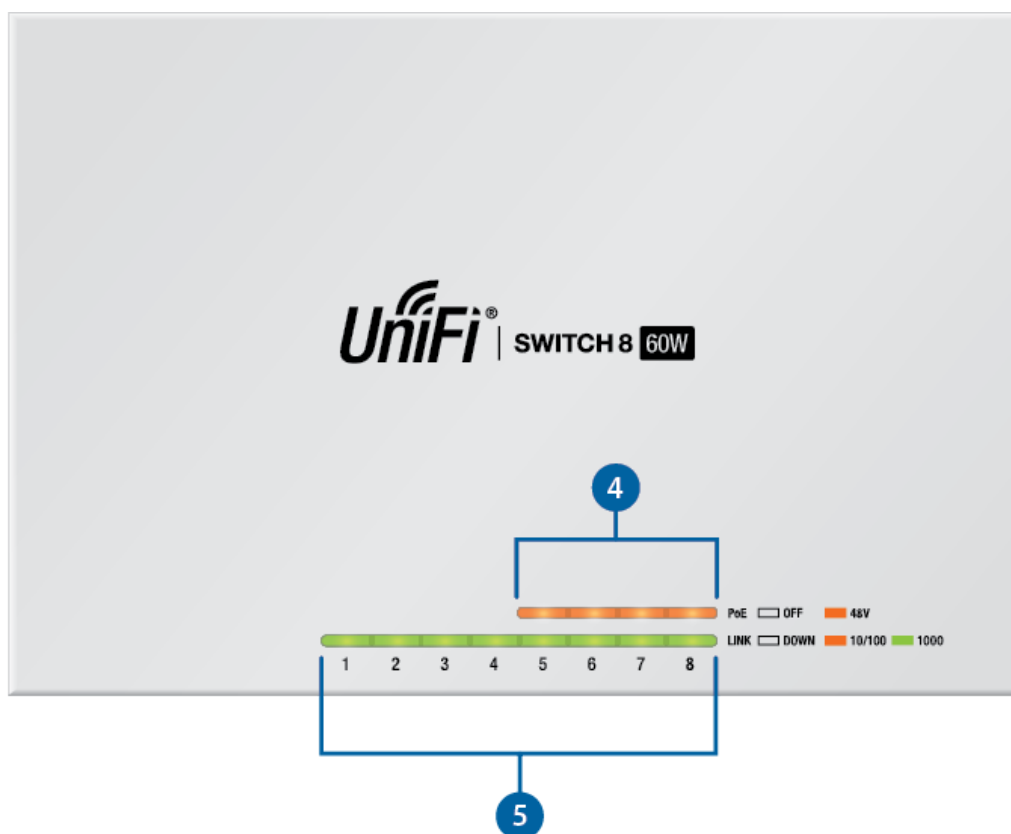


4 PoE LED (Ports 5 - 8)

| | |
|-------|-----------------------|
| Off | PoE Off |
| Amber | PoE On (IEEE 802.3af) |

5 RJ45 Speed/Link/Act LED (Ports 1 - 8)

| | |
|-------|--|
| Off | No Link |
| Amber | Link Established at 10/100 Mbps Flashing Indicates Activity |
| Green | Link Established at 1 Gbps Flashing Indicates Activity |

Click for
Table of Contents

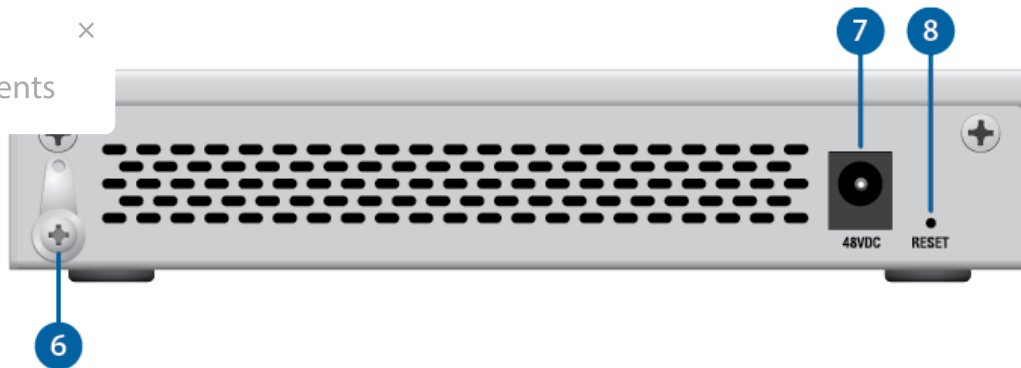

6 Ground

Optional ancillary grounding point.

7 Power

Connect the included Power Adapter to the Power port.

8 Reset Button

This button serves two functions for the UniFi Switch:

- **Restart** Press and release the Reset button quickly.
- **Restore to Factory Default Settings** Press and hold the Reset button for more than five seconds.


Hardware Installation

Wall Mounting (Optional)


1.

Click for
Table of Contents

×

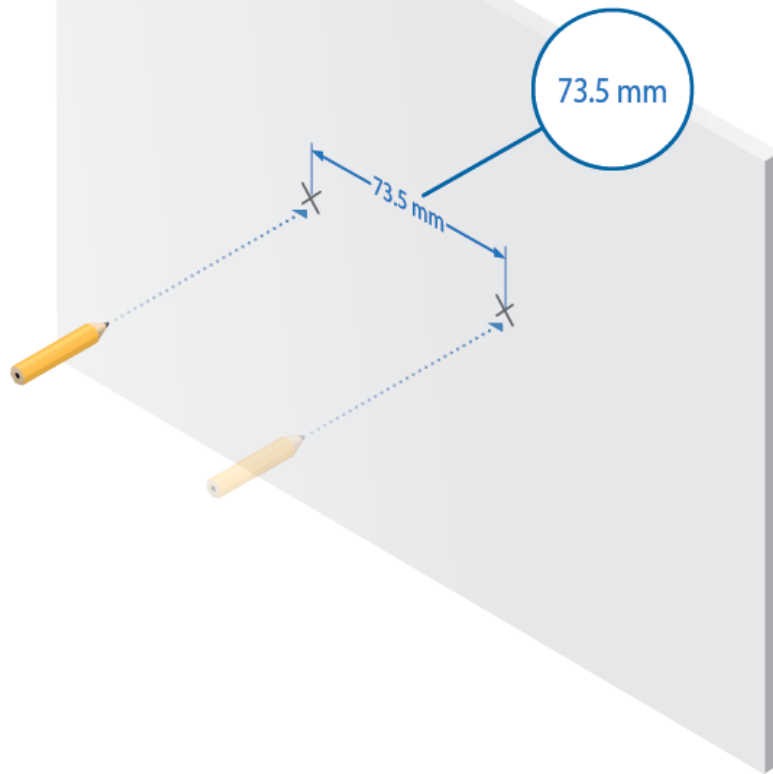


2.

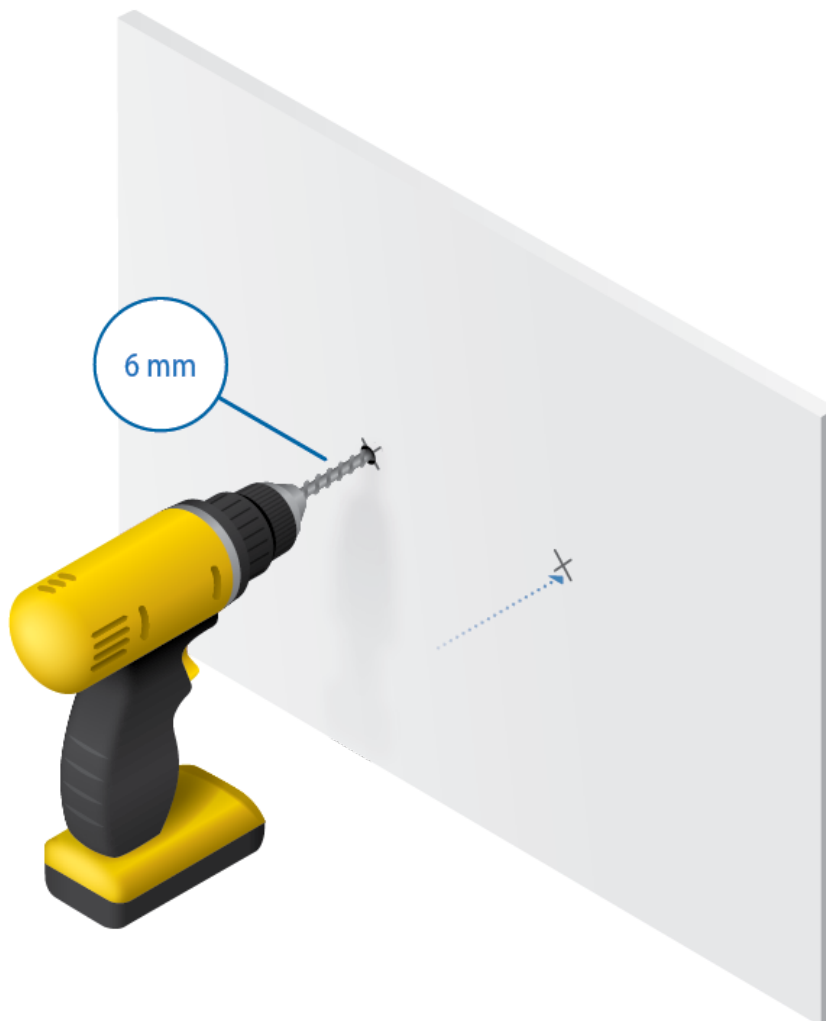

3.

Click for
Table of Contents

×

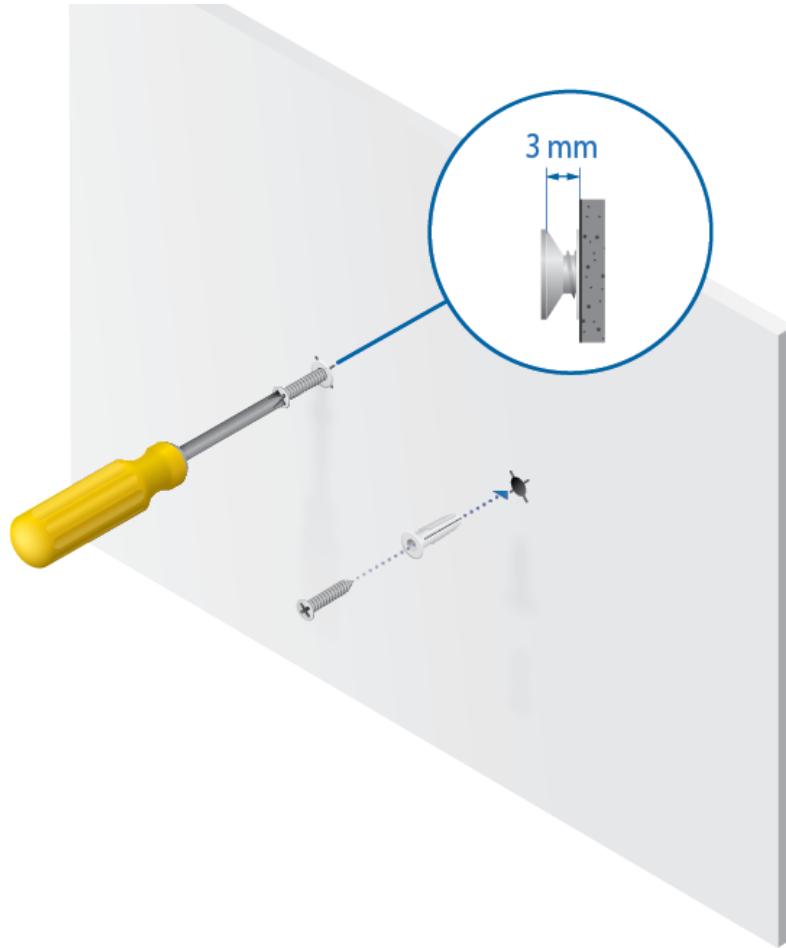


4.



The US-8-60W is grounded through the Power Adapter; however, you can enhance ESD protection by connecting the ancillary ground.

Click for Table of Contents

and screw and secure a ground wire (not included) to the grounding point.

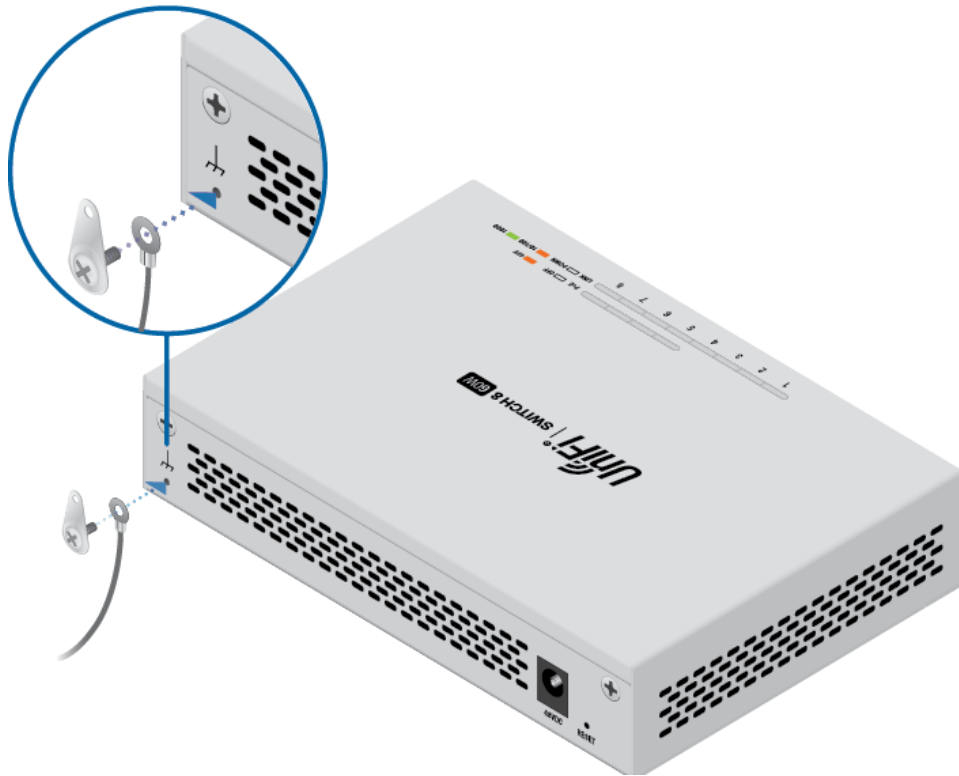

2. Secure the other end of the ground wire to a grounding block or other grounded structure.


Connecting Power

- 1.



- 2.

Click for
Table of Contents

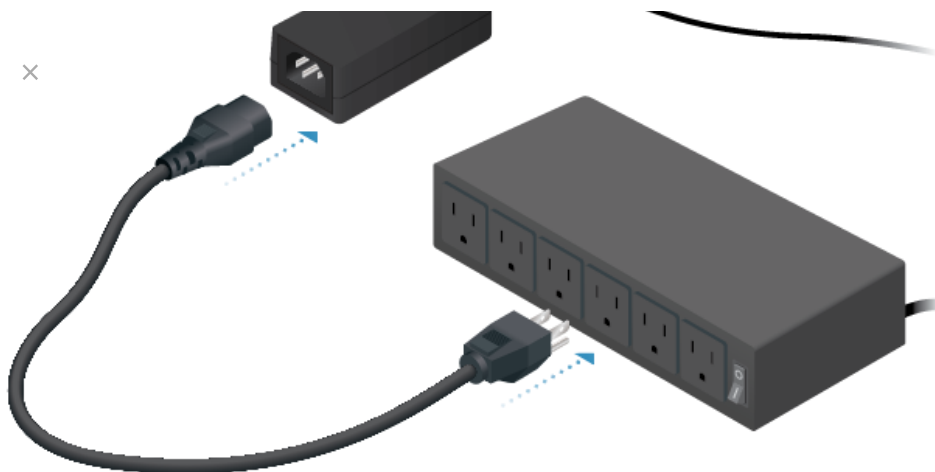

Connecting Ethernet



Software Installation


Download and install the latest version of the UniFi Controller software at ui.com/download/unifi and follow the on-screen instructions.



Note: If you already have UniFi Controller v5.3.x or higher installed, go to the section, Adopting the UniFi Switch.

After you have installed the software and run the UniFi Installation Wizard, a login screen will appear for the UniFi Controller management interface. Enter the username and password that you created and click Sign In.

Click for
Table of Contents

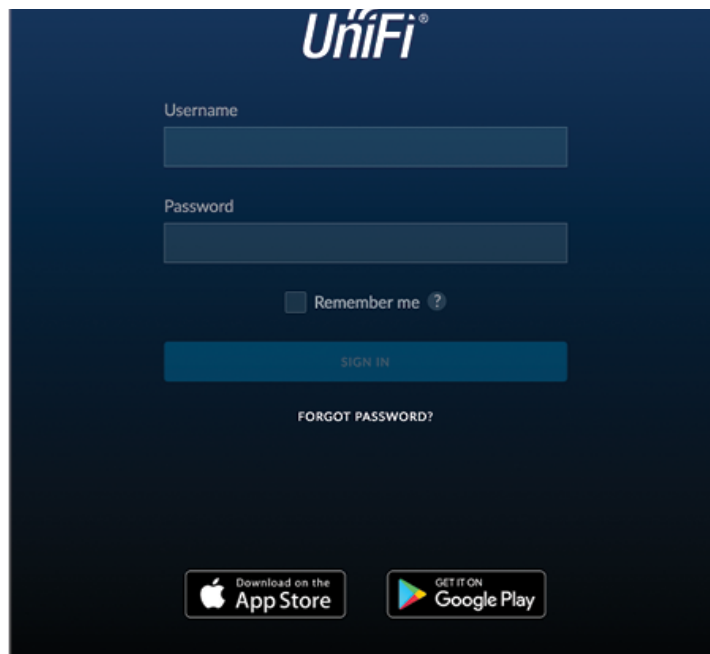

You can manage your network and view network statistics using the UniFi Controller management interface.

To adopt the UniFi Switch, proceed to the section, Adopting the UniFi Switch.

For information on configuring and using the UniFi Controller software, refer to the User Guide on the website: ui.com/download/unifi

Adopting the UniFi Switch

1. From the UniFi Controller dashboard, click Devices in the left menu bar.



2. Locate the UniFi Switch in the list of devices under the Model column. Click Adopt.

Click for
Table of Contents

| DEVICE NAME | IP ADDRESS | STATUS | MODEL | VERSION | UPTIME | ACTIONS |
|-----------------------|---------------|----------------------|--------------------------|----------------|----------------|----------------|
| 192.168.1.1 | 192.168.1.1 | PENDING APPROVAL | UniFi Switch 8 | 4.3.11.4852827 | 35m 45s | ADOPT |
| 192.168.1.233 | 192.168.1.233 | CONNECTED | UniFi Switch 16 POE-150W | 3.5.1.4088 | 10d 18h 45m 7s | LOCATE RESTART |
| 192.168.1.191 | 192.168.1.191 | CONNECTED | UniFi Switch 48 POE-500W | 3.5.1.4088 | 4d 21h 55m 15s | LOCATE RESTART |
| 192.168.1.246 | 192.168.1.246 | CONNECTED | UniFi Switch 48 POE-750W | 3.5.1.4088 | 3d 21h 12m 13s | LOCATE RESTART |
| 192.168.1.6 | 192.168.1.6 | CONNECTED | UniFi Switch 48 POE-750W | 3.5.1.4088 | 4d 21h 55m 29s | LOCATE RESTART |
| 192.168.1.204 | 192.168.1.204 | CONNECTED | UniFi Switch 8 POE-150W | 3.5.1.4088 | 1d 8h 10m 17s | LOCATE RESTART |
| AC-Broadcom | 192.168.1.231 | CONNECTED | UniFi AP-AC-v2 | 3.5.1.4088 | 4d 21h 53m 4s | LOCATE RESTART |
| AC-LiTE | 192.168.1.162 | CONNECTED | UniFi AP-AC-Lite | 3.6.1.3553 | 3d 21h 17m 32s | LOCATE RESTART |
| AC-LR-Basement | 192.168.1.137 | CONNECTED | UniFi AP-AC-LR | 3.6.1.3553 | 4d 21h 54m 6s | LOCATE RESTART |
| 44d9e7020433 | 192.168.1.197 | CONNECTED | UniFi AP-AC-Lite | 3.6.1.3553 | 3d 21h 1m 32s | LOCATE RESTART |
| 44d9e7020444 | 192.168.1.198 | CONNECTED | UniFi AP-AC-LR | 3.6.1.3553 | 3d 19h 26m 8s | LOCATE RESTART |
| AC-Pro-Basement | 192.168.1.7 | CONNECTED | UniFi AP-AC-Pro Gen2 | 3.6.1.3553 | 4d 21h 53m 31s | LOCATE RESTART |
| 44d9e7020489 | 192.168.1.200 | CONNECTED | UniFi AP-AC-Pro Gen2 | 3.6.1.3553 | 9d 17h 59m 46s | LOCATE RESTART |
| Prototype1 UAP-AC-Pro | 192.168.1.182 | CONNECTED (SEE PAGE) | UniFi AP-AC-Pro Gen2 | 3.6.1.3553 | 1d 8h 9m 12s | LOCATE RESTART |
| AC-Pro-Crawlspace | 192.168.1.134 | CONNECTED | UniFi AP-AC-Pro Gen2 | 3.6.1.3553 | 3d 21h 19m 14s | LOCATE RESTART |
| Timeout | 192.168.1.235 | CONNECTED | UniFi AP-In Wall | 3.5.1.4088 | 1d 8h 9m 14s | LOCATE RESTART |
| Living | 192.168.1.136 | CONNECTED | UniFi AP-In Wall | 3.5.1.4088 | 1d 8h 8m 36s | LOCATE RESTART |
| Sitting | 192.168.1.124 | CONNECTED | UniFi AP-In Wall | 3.5.1.4088 | 1d 8h 8m 16s | LOCATE RESTART |
| Master | 192.168.1.158 | CONNECTED | UniFi AP-In Wall | 3.5.1.4088 | 1d 8h 8m 18s | LOCATE RESTART |
| Loft | 192.168.1.139 | CONNECTED | UniFi AP-In Wall | 3.5.1.4088 | 1d 8h 8m 32s | LOCATE RESTART |
| Basement | 192.168.1.140 | CONNECTED | UniFi AP-In Wall | 3.5.1.4088 | 1d 8h 8m 25s | LOCATE RESTART |
| 24d43c942fd9 | 192.168.1.122 | CONNECTED | UniFi AP-Outdoor+ | 3.5.1.4088 | 3d 17h 22m 54s | LOCATE RESTART |
| Pro-roamtest2 | 192.168.1.164 | CONNECTED | UniFi AP-Pro | 3.5.1.4088 | 1d 8h 20m 25s | LOCATE RESTART |
| Pro-roamtest | 192.168.1.141 | CONNECTED | UniFi AP-Pro | 3.5.1.4088 | 3d 21h 16m 49s | LOCATE RESTART |

3. The System LED on the UniFi Switch will turn blue to confirm that it has been successfully adopted.

Specifications

| US-8-60W | |
|---------------------------|--|
| Dimensions | 148 x 99.5 x 30.7 mm (5.83 x 3.92 x 1.21") |
| Weight | 432 g (15.24 oz) |
| Networking Interfaces | (8) 10/100/1000 Mbps RJ45 Ports |
| PoE Interfaces | (4) Ports 5, 6, 7, 8: IEEE 802.3af |
| Power Method | 48VDC, Max. 2A |
| Power Supply | External AC/DC Adapter: 100-240VAC, 50/60 Hz; 48V, 1.25A |
| Max. Power Consumption | 12W (Excluding PoE Output) |
| Max. PoE Wattage per Port | 15.4W |
| PoE Output (Ports 5 to 8) | IEEE 802.3af 2-Pair (Pins 1, 2+; 3, 6-) |
| Line Rate | 8 Gbps, Non-Blocking |
| LEDs | |
| System | Status |
| RJ45 Data Ports | PoE; Link/Speed/Activity |
| ESD/EMP Protection | ± 24kV Air, ± 24kV Contact |
| Operating Temperature | -5 to 45° C (23 to 113° F) |
| Operating Humidity | 5 to 95% Noncondensing |
| Certifications | CE, FCC, IC |

Safety Notices

2. Only use attachments/accessories specified by the manufacturer.

Click for
Table of Contents

Failure to provide proper ventilation may cause fire hazard. Keep at least 20 mm of
ext to the ventilation holes for adequate airflow.



WARNING: To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.



WARNING: Do not use this product in location that can be submerged by water.



WARNING: Avoid using this product during an electrical storm. There may be a remote risk of electric shock from lightning.

Electrical Safety Information

1. Compliance is required with respect to voltage, frequency, and current requirements indicated on the manufacturer's label. Connection to a different power source than those specified may result in improper operation, damage to the equipment or pose a fire hazard if the limitations are not followed.
2. There are no operator serviceable parts inside this equipment. Service should be provided only by a qualified service technician.
3. This equipment is provided with a detachable power cord which has an integral safety ground wire intended for connection to a grounded safety outlet.
 - a. Do not substitute the power cord with one that is not the provided approved type. Never use an adapter plug to connect to a 2-wire outlet as this will defeat the continuity of the grounding wire.
 - b. The equipment requires the use of the ground wire as a part of the safety certification, modification or misuse can provide a shock hazard that can result in serious injury or death.
 - c. Contact a qualified electrician or the manufacturer if there are questions about the installation prior to connecting the equipment.
 - d. Protective earthing is provided by Listed AC adapter. Building installation shall provide appropriate short-circuit backup protection.
 - e. Protective bonding must be installed in accordance with local national wiring rules and regulations.

Limited Warranty

ui.com/support/warranty

The limited warranty requires the use of arbitration to resolve disputes on an individual basis, and, where applicable, specify arbitration instead of jury trials or class actions.

Compliance

FCC

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions.

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Click for
Table of Contents

x

interference when the equipment is operated in a commercial environment. This equipment generates, radio frequency energy and, if not installed and used in accordance with the may cause harmful interference to radio communications. Operations of this ential area is likely to cause harmful interference in which case the user will be ie interference at his own expense.

ISED Canada

CAN ICES-3(A)/NMB-3(A)

Australia and New Zealand



Warning: This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.

CE Marking

CE marking on this product represents the product is in compliance with all directives that are applicable to it.



WEEE Compliance Statement

Declaration of Conformity

Online Resources

