

AërQ Temperature & Humidity Sensor

SKU: AEOEZWA009



Quickstart

This is a **secure Alarm Sensor for Europe**. To run this device please insert fresh **1 * CR2477** batteries. Please make sure the internal battery is fully charged. Tripple clicking the central button includes (adds) and excludes (removes) the device. A click on the central button will wake up the device. The device supports the Security S2 framework with unauthenticated and authenticated network keys. Please follow the instructions on the central controller when including. The device also supports Smart Start. Please scan the QR code on the outlet cover of the device and your controller will add the device automatically when powered up.

Important safety information

Please read this manual carefully. Failure to follow the recommendations in this manual may be dangerous or may violate the law. The manufacturer, importer, distributor and seller shall not be liable for any loss or damage resulting from failure to comply with the instructions in this manual or any other material. Use this equipment only for its intended purpose. Follow the disposal instructions. Do not dispose of electronic equipment or batteries in a fire or near open heat sources.

What is Z-Wave?

Z-Wave is the international wireless protocol for communication in the Smart Home. This device is suited for use in the region mentioned in the Quickstart section.

Z-Wave ensures a reliable communication by reconfirming every message (**two-way communication**) and every mains powered node can act as a repeater for other nodes (**meshed network**) in case the receiver is not in direct wireless range of the transmitter.

This device and every other certified Z-Wave device can be **used together with any other certified Z-Wave device regardless of brand and origin** as long as both are suited for the same frequency range.

If a device supports **secure communication** it will communicate with other devices secure as long as this device provides the same or a higher level of security. Otherwise it will automatically turn into a lower level of security to maintain backward compatibility.

For more information about Z-Wave technology, devices, white papers etc. please refer to www.z-wave.info.



Product Description

This device measures the three air quality parameters temperature, humidity and dew point and reports them to a central controller. Besides this, the device can directly control groups of other Z-Wave devices on over- and undershooting a set temperature and/or humidity parameter. This can be used to establish control loops for temperature and humidity. The device wakes up every 15 minutes to measure the values and it will send unsolicited reports when values change. Additionally, the device will report all values on request.

The mold detector is actively monitoring the danger of mold in a room based on the temperature and humidity and will issue alarm warnings when critical air conditions met. Wireless Alarm and red and a green blinking LED will indicate a mold condition. This local LED warning function is also available when the device is not included in any Z-Wave network and works stand alone.

Prepare for Installation / Reset

Please read the user manual before installing the product.

In order to include (add) a Z-Wave device to a network it **must be in factory default state**. Please make sure to reset the device into factory default. You can do this by performing an Exclusion operation as described below in the manual. Every Z-Wave controller is able to perform this operation however it is recommended to use the primary controller of the previous network to make sure the very device is excluded properly from this network.

Reset to factory default

This device also allows to be reset without any involvement of a Z-Wave controller. This procedure should only be used when the primary controller is inoperable.

Keep the button pressed for 10 seconds. After 5 seconds the red LED will start blinking.

Safety Warning for Batteries

The product contains batteries. Please remove the batteries when the device is not used. Do not mix batteries of different charging level or different brands.

Installation

Just place the device on any flat surface. Please keep in mind that the temperature may be different in different locations inside the room. If placed too close to the heating both temperature, humidity and dew point values may be wrong. The device is IP 20 rated. This means that it must not be exposed to direct water (rain). It is safe to use the device in a humid environment such as a bathroom or dedicated washing facility.

Inclusion/Exclusion

On factory default the device does not belong to any Z-Wave network. The device needs to be **added to an existing wireless network** to communicate with the devices of this network. This process is called **Inclusion**.

Devices can also be removed from a network. This process is called **Exclusion**. Both processes are initiated by the primary controller of the Z-Wave network. This controller is turned into exclusion respective inclusion mode. Inclusion and Exclusion is then performed doing a special manual action right on the device.

Inclusion

1. Insert the battery.
2. Press the button quickly three times in a row.

Exclusion

1. Press the button quickly three times in a row.

Product Usage

Once the device is powered up it will start monitoring the air parameters and warn of mold using the local red and green LED. All air parameters are measured every 15 minutes. Pushing the button will force an immediate measurement and the LEDs will indicate the danger of mold

- green: no danger of mold in the room
- red: danger of mold, open the windows to lower the humidity

The device contains two sensors with the following accuracy measures:

- Relativity Humidity: precision $\pm 3\%$ RH (max), range 0 to 80% RH
- Temperature: precision ± 0.4 °C (max), range 0 to 65 °C
- Dew Point: precision ± 0.4 °C (max), range 0 to 65 °C (calculated from other sensor values)

The device sends the following notifications to the central controller:

- Weather Alarm - Moisture Alarm(0x10 - 0x02)
- Power management - Replace battery now(0x08 - 0x0b)
- Heat Alarm - Overheat Unknown Location(0x04 - 0x02)
- Heat Alarm - Underheat Unknown Location(0x04 - 0x05)

For get the status of the device on the network you need insert a battery to device. And you see result: - "The GREEN LED will blink one time in case of success or RED LED will blink five times in case of failure".

Quick trouble shooting

Here are a few hints for network installation if things dont work as expected.

1. Make sure a device is in factory reset state before including. In doubt exclude before include.
2. If inclusion still fails, check if both devices use the same frequency.
3. Remove all dead devices from associations. Otherwise you will see severe delays.
4. Never use sleeping battery devices without a central controller.
5. Dont poll FLIRS devices.
6. Make sure to have enough mains powered device to benefit from the meshing

Firmware-Update over the Air

This device is capable of receiving a new firmware 'over the air'. The update function needs to be supported by the central controller. Once the controller starts the update process, perform the following action to confirm the firmware update: **Wake Up** the device by pressing the central button once.

Association - one device controls an other device

Z-Wave devices control other Z-Wave devices. The relationship between one device controlling another device is called association. In order to control a different device, the controlling device needs to maintain a list of devices that will receive controlling commands. These lists are called association groups and they are always related to certain events (e.g. button pressed, sensor triggers, ...). In case the event happens all devices stored in the respective association group will receive the same wireless command wireless command, typically a 'Basic Set' Command.

Association Groups:

Group Number	Maximum Nodes	Description
1	5	Lifeline
2	5	Temperature High Trigger
3	5	Temperature Low Trigger
4	5	Humidity High Trigger
5	5	Humidity Low Trigger
6	5	Air Temperature

Configuration Parameters

Z-Wave products are supposed to work out of the box after inclusion, however certain configuration can adapt the function better to user needs or unlock further enhanced features.

IMPORTANT: Controllers may only allow configuring signed values. In order to set values in the range 128 ... 255 the value sent in the application shall be the desired value minus 256. For example: To set a parameter to 200 it may be needed to set a value of 200 minus 256 = minus 56. In case of a two byte value the same logic applies: Values greater than 32768 may needed to be given as negative values too.

Parameter 1: Minimum Temperature change to report

This value defines the minimum change of temperature to cause an unsolicited report of humidity to the central controller using Lifeline. If the value is set to 0, there will be no reports sent to the controller, when the temperature changes. However, periodic reports, managed by configuration parameter 4, may still be active.

Size: 1 Byte, Default Value: 20

Setting	Description
0	disabled
1 - 100	1/10 degree

Parameter 2: Minimum humidity change to report

This value defines the minimum change of humidity to cause an unsolicited report of humidity to the central controller using Lifeline. If the value is set to 0, there will be no reports sent to the controller, when the humidity changes. However, periodic reports, managed by configuration parameter 4, may still be active.

Size: 1 Byte, Default Value: 5

Setting	Description
0	disabled
1 - 20	%

Parameter 4: Periodic Reports

This parameter defines the time interval to send an unsolicited report. If the value is set to 0, there will be no periodic reports sent to the controller. However, reports on temperature/humidity changes, managed by configuration parameters 1 and 2, may still be active.

Size: 2 Byte, Default Value: 43200

Setting	Description
0	disabled
900 - 65535	Seconds

Parameter 5: Temperature Upper Watermark value

This parameter defines a temperature. If the measured temperature surpasses this watermark a BASIC command is sent into Association Group 2

Size: 2 Byte, Default Value: 0

Setting	Description
0	disabled
1 - 1000	1/10 degree

Parameter 6: Temperature Lower Watermark value

This parameter defines a temperature. If the measured temperature dropps below this watermark a BASIC command is sent into Association Group 3

Size: 2 Byte, Default Value: 0

Setting	Description
0	disabled
200 - 1000	1/10 degree

Parameter 7: Humidity Upper Watermark value

This parameter defines a relative humidity. If the measured relative humidity surpasses this watermark a BASIC command is sent into Association Group 4

Size: 1 Byte, Default Value: 0

Setting	Description
0	disabled
1 - 90	%

Parameter 8: Humidity Lower Watermark value

This parameter defines a relative humidity. If the measured temperature dropps below this relative humidity a BASIC command is sent into Association Group 5

Size: 1 Byte, Default Value: 0

Setting	Description
0	disabled
1 - 90	%

Parameter 9: Low Temperature Trigger BASIC Set Command Value

This defines what BASIC command shall be sent out into association group 3

Size: 1 Byte, Default Value: 255

Setting	Description
0 - 255	Value

Parameter 10: High Temperature Trigger BASIC Set Command Value

This defines what BASIC command shall be sent out into association group 2

Size: 1 Byte, Default Value: 0

Setting	Description
0 - 255	Value

Parameter 11: Low Humidity Trigger BASIC Set Command Value

This defines what BASIC command shall be sent out into association group 5

Size: 1 Byte, Default Value: 255

Setting	Description
0 - 255	Value

Parameter 12: High Humidity Trigger BASIC Set Command Value

This defines what BASIC command shall be sent out into association group 4

Size: 1 Byte, Default Value: 0

Setting	Description
0 - 255	Value

Parameter 13: Offset value for Mold danger notification

This value allows to increase the humidity threshold for mold danger notification by max 10%

Size: 1 Byte, Default Value: 0

Setting	Description
0 - 10	%

Parameter 64: Temperature Scale

This parameter sets the temperature scale.

Size: 1 Byte, Default Value: 1

Setting	Description
1	Celsius
2	Fahrenheit

Parameter 255: Reset Parameter

This parameter helps reset configuration parameters and the device to factory defaults

Size: 4 Byte, Default Value: 0

Setting	Description
1 - 1431655764	Reset all Parameter settings to their default settings.
1431655765	Completely factory reset sensor and send device reset locally notification.

Technical Data

Dimensions	34x34x16 mm
Hardware Platform	ZGM130S
EAN	1220000016644
IP Class	IP 20
Battery Type	1 * CR2477
Device Type	Notification Sensor
Generic Device Class	GENERIC TYPE SENSOR NOTIFICATION (0x07)
Specific Device Class	SPECIFIC TYPE NOTIFICATION SENSOR (0x01)
Network Operation	Reporting Sleeping Slave
Firmware Version	01.00
Z-Wave Version	07.12
Certification ID	ZC12-20080086
Z-Wave Product Id	0371.0002.0009
Frequency	Europe - 868,4 Mhz
Maximum transmission power	5 mW

Supported Command Classes

- Sensor Binary (unsec+s2 Unauth+s2 Auth)
- Sensor Multilevel (unsec+s2 Unauth+s2 Auth)
- Multichannel Association (unsec+s2 Unauth+s2 Auth)
- Association Grp Info (unsec+s2 Unauth+s2 Auth)
- Device Reset Locally (unsec+s2 Unauth+s2 Auth)
- Zwaveplus Info (unsec)
- Configuration (unsec+s2 Unauth+s2 Auth)
- Notification (unsec+s2 Unauth+s2 Auth)
- Manufacturer Specific (unsec+s2 Unauth+s2 Auth)
- Powerlevel (unsec+s2 Unauth+s2 Auth)
- Firmware Update Md (unsec+s2 Unauth+s2 Auth)
- Battery (unsec+s2 Unauth+s2 Auth)
- Wake Up (unsec+s2 Unauth+s2 Auth)
- Indicator (unsec+s2 Unauth+s2 Auth)
- Association (unsec+s2 Unauth+s2 Auth)
- Version (unsec+s2 Unauth+s2 Auth)
- Security V2
- Supervision (unsec)
- Transport (unsec)

Explanation of Z-Wave specific terms

- **Controller** — is a Z-Wave device with capabilities to manage the network. Controllers are typically Gateways, Remote Controls or battery operated wall controllers.
- **Slave** — is a Z-Wave device without capabilities to manage the network. Slaves can be sensors, actuators and even remote controls.
- **Primary Controller** — is the central organizer of the network. It must be a controller. There can be only one primary controller in a Z-Wave network.
- **Inclusion** — is the process of adding new Z-Wave devices into a network.
- **Exclusion** — is the process of removing Z-Wave devices from the network.
- **Association** — is a control relationship between a controlling device and a controlled device.
- **WakeUp Notification** — is a special wireless message issued by a Z-Wave device to announces that is able to communicate.
- **Node Information Frame** — is a special wireless message issued by a Z-Wave device to announce its capabilities and functions.

(c) 2021 Z-Wave Europe GmbH, Antonstr. 3, 09337 Hohenstein-Ernstthal, Germany, All rights reserved, www.zwave.eu. The template is maintained by [Z-Wave Europe GmbH](#). The product content is maintained by Z-Wave Europe GmbH , Supportteam, support@zwave.eu. Last update of the product data: 2020-09-03 09:24:12