

USG-PRO-4 Quick Start Guide



Click for
Table of Contents



tents



UniFi Security Gateway Pro



Power Cord



Mounting Screws (Qty. 4)



Cage Nuts (Qty. 4)

Installation Requirements

- Phillips screwdriver
- Standard-sized, 19" wide rack with a minimum of 1U height available
- For indoor applications, use Category 5 (or above) UTP cabling approved for indoor use.
- For outdoor applications, shielded Category 5 (or above) cabling should be used for all wired Ethernet connections and should be grounded through the AC ground of the power supply.

We recommend that you protect your networks from harmful outdoor environments and destructive ESD events with industrial-grade, shielded Ethernet cable from Ubiquiti. For more details, visit: ui.com/toughcable



Note: Although the cabling can be located outdoors, the UniFi Gateway itself should be housed inside a protective enclosure.




IMPORTANT: We strongly recommend using UPS backup and power regulation to prevent equipment damage due to stability issues with local AC power.

Click for ^x [environment 1.6 \(or above\)](#)

Google Chrome (Other browsers may have limited functionality)

- # Hardware Overview

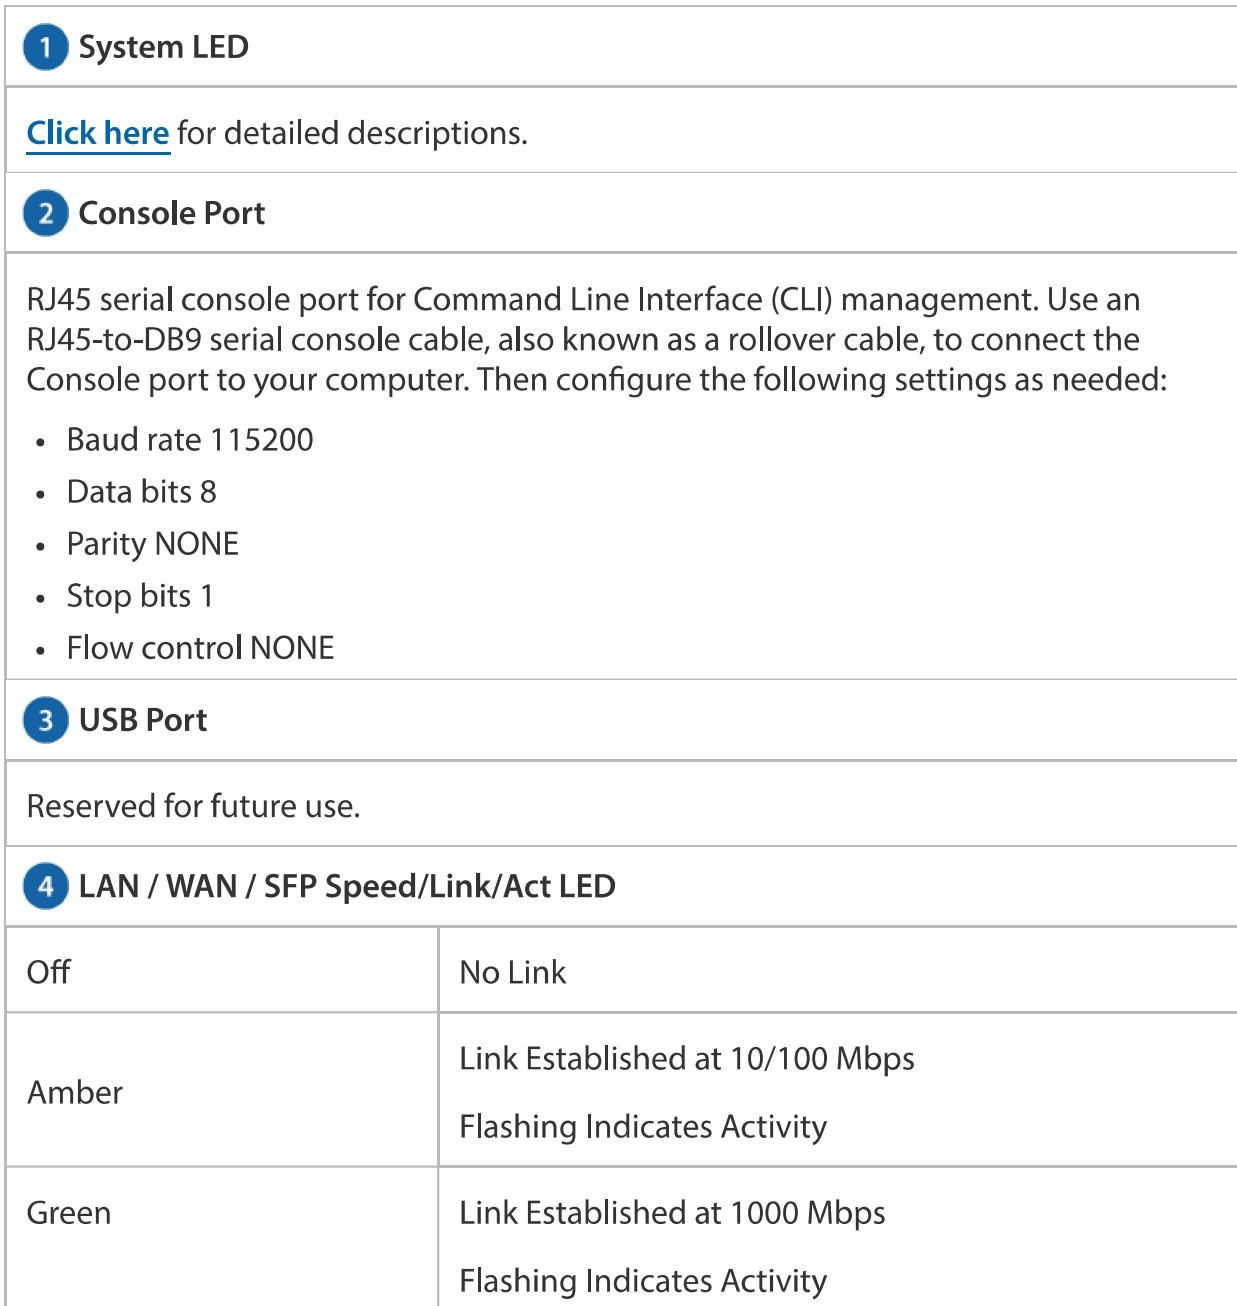

USG-PRO-4 Quick Start Guide



Click for
Table of Contents

× 10/100/1000 Ethernet connections. By default, the LAN1 port is and its IP address is 192.168.1.1/24.

6 WAN (Ports 1 - 2)

RJ45 ports support 10/100/1000 Ethernet connections. A WAN port is active only if the corresponding SFP port is empty. By default, the WAN1 port is set to DHCP Client.

7 SFP (Ports 1 - 2)

SFP ports are hot-swappable and support 10/100/1000 fiber SFP modules. If an SFP module is plugged in, then the SFP port is active, and the corresponding WAN port is deactivated. By default, the SFP1 port is set to DHCP Client.

8 Reset Button

Resets to factory defaults. The UniFi Gateway should be running after bootup is complete. Press and hold the Reset button for about 10 seconds until the right LED on the WAN2 port starts flashing and then becomes solidly lit. After a few seconds, the LED will turn off, and the UniFi Gateway will automatically reboot.

Hardware Installation

1.



2.


USG-PRO-4 Quick Start Guide



Click for
Table of Contents



OR

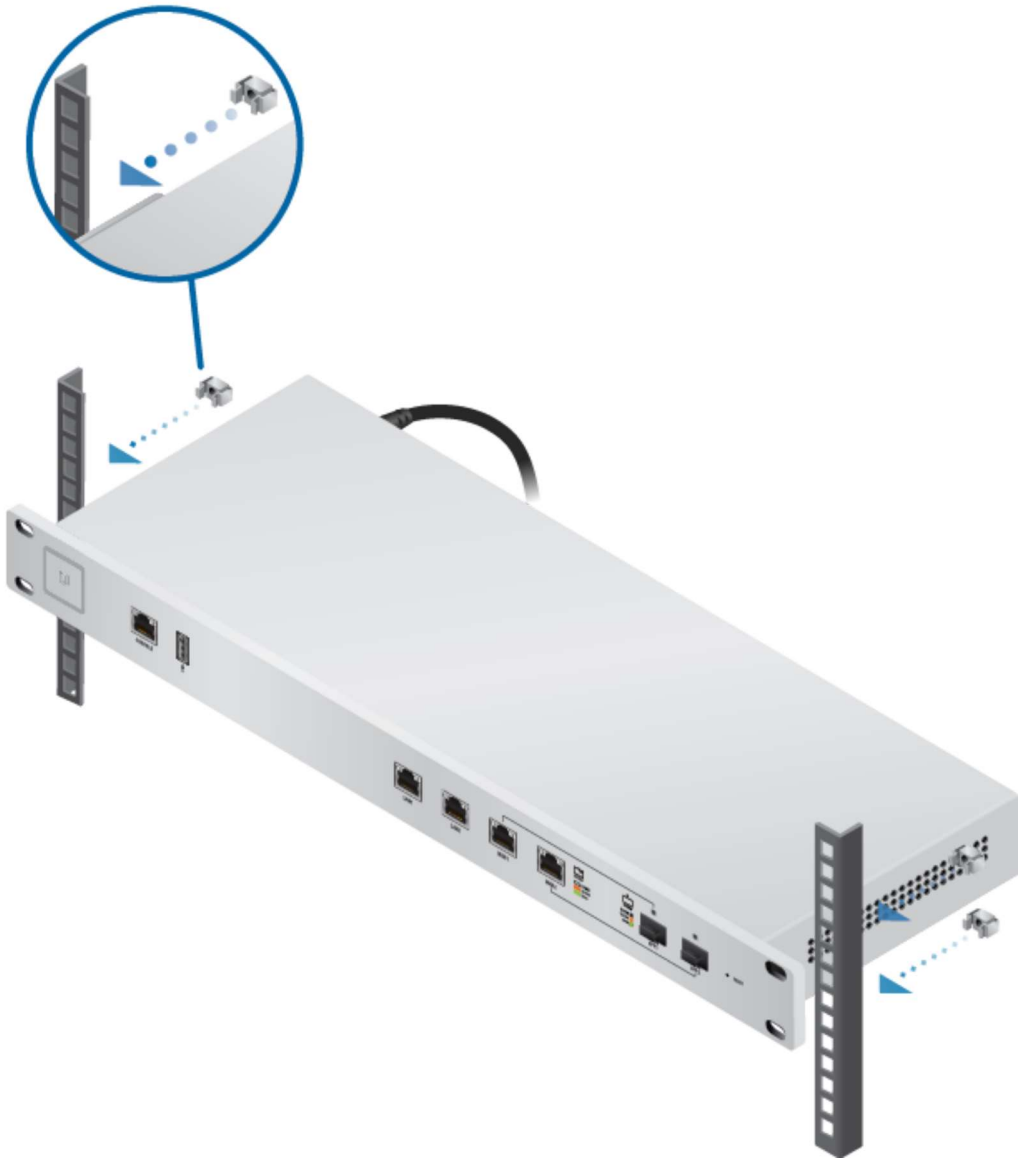


USG-PRO-4 Quick Start Guide



Click for
Table of Contents



3.

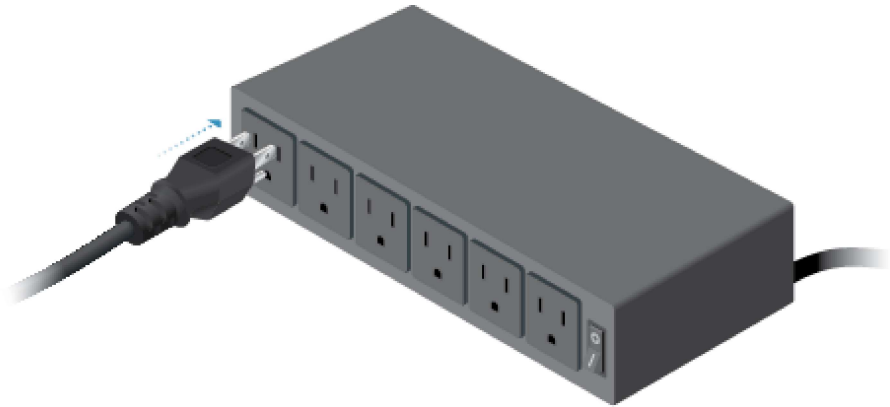

Connecting Ethernet

USG-PRO-4 Quick Start Guide



Using SFP Ports

1.



2.

USG-PRO-4 Quick Start Guide



Note: The corresponding WAN port will be deactivated.

3.



For information about compatible fiber SFP modules, visit: community.ubnt.com/unifi

Software Installation


USG-PRO-4 Quick Start Guide

From a management station connected to the same Layer-2 network, launch the UniFi Controller. Follow the on-screen instructions.

Click for

Table of Contents If you already have UniFi Controller v4.8 or higher installed, go to the Adopting the UniFi Gateway.

After you have installed the software and run the UniFi Installation Wizard, a login screen will appear for the UniFi Controller management interface. Enter the username and password that you created and click Sign In.

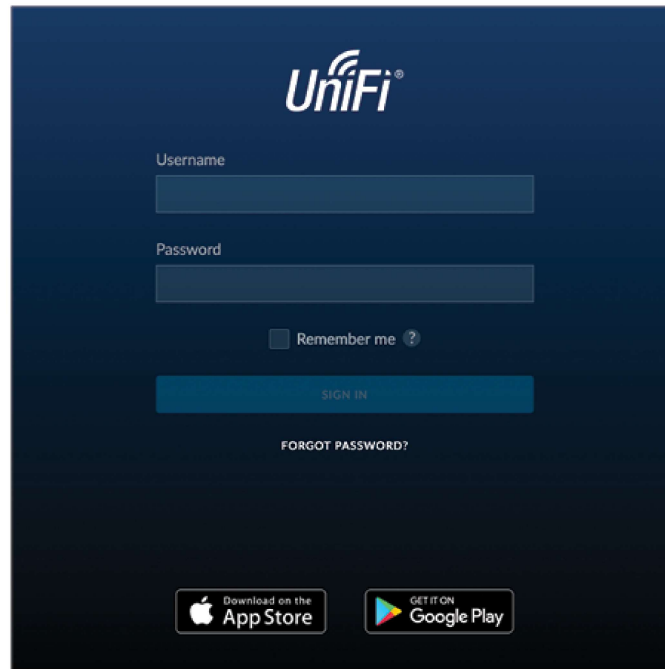

You can manage your network and view network statistics using the UniFi Controller management interface. For information on using the UniFi Controller software, refer to the User Guide located on our website at: ui.com/download/unifi

Adopting the UniFi Gateway

1. From the UniFi Controller dashboard, click Devices in the left menu bar.

USG-PRO-4 Quick Start Guide



2. Locate the UniFi Gateway in the list of devices under the Model column. Click Adopt.

UniFi						Current Site Forum	Username superadmin
All (24)						Search	
Gateway/Switches (6)						Phones (0)	
	Device Name	IP Address	Status	Model	Version	Uptime	Actions
	192.168.1.1	192.168.1.1	PENDING APPROVAL	UniFi Switch-8	4.3.11.4852827	15m 45s	ADOPT
	Active US-16-150W	192.168.1.233	CONNECTED	UniFi Switch 16 POE-150W	3.5.1.4088	10d 18h 45m 7s	LOCATE RESTART
	Downstairs US-48-500W	192.168.1.191	CONNECTED	UniFi Switch 48 POE-500W	3.5.1.4088	4d 21h 55m 15s	LOCATE RESTART
	Workshop US-48-750W	192.168.1.246	CONNECTED	UniFi Switch 48 POE-750W	3.5.1.4088	3d 21h 12m 13s	LOCATE RESTART
	Rack US-48-750W	192.168.1.6	CONNECTED	UniFi Switch 48 POE-750W	3.5.1.4088	4d 21h 55m 29s	LOCATE RESTART
	PatchPanel US-8-150W	192.168.1.204	CONNECTED	UniFi Switch-8 POE-150W	3.5.1.4088	1d 8h 10m 17s	LOCATE RESTART
	AC-Broadcom	192.168.1.231	CONNECTED	UniFi AP-AC-v2	3.5.1.4088	4d 21h 53m 4s	LOCATE RESTART
	AC-LITE	192.168.1.162	CONNECTED	UniFi AP-AC-Lite	3.6.1.3553	3d 21h 17m 32s	LOCATE RESTART
	AC-4R-Basement	192.168.1.137	CONNECTED	UniFi AP-AC-Lit	3.6.1.3553	4d 21h 54m 6s	LOCATE RESTART
	44d9e7 02 04-33	192.168.1.197	CONNECTED	UniFi AP-AC-Lite	3.6.1.3553	3d 21h 15m 32s	LOCATE RESTART
	44d9e7 02 04-44	192.168.1.198	CONNECTED	UniFi AP-AC-Lit	3.6.1.3553	3d 19h 26m 8s	LOCATE RESTART
	AC-Pro-Basement	192.168.1.7	CONNECTED	UniFi AP-AC-Pro Gen2	3.6.1.3553	4d 21h 53m 31s	LOCATE RESTART
	44d9e7 ff 02-89	192.168.1.200	CONNECTED	UniFi AP-AC-Pro Gen2	3.6.1.3553	9d 17h 59m 46s	LOCATE RESTART
	Prototype1 UAP-AC-Pro	192.168.1.182	CONNECTED (JUNK PHONE)	UniFi AP-AC-Pro Gen2	3.6.1.3553	10d 8h 9m 12s	LOCATE RESTART
	AC-Pro-Crawlpace	192.168.1.134	CONNECTED	UniFi AP-AC-Pro Gen2	3.6.1.3553	3d 21h 19m 14s	LOCATE RESTART
	Timeout	192.168.1.235	CONNECTED	UniFi AP-In Wall	3.5.1.4088	1d 8h 9m 14s	LOCATE RESTART
	Living	192.168.1.136	CONNECTED	UniFi AP-In Wall	3.5.1.4088	1d 8h 8m 16s	LOCATE RESTART
	Sitting	192.168.1.124	CONNECTED	UniFi AP-In Wall	3.5.1.4088	1d 8h 8m 16s	LOCATE RESTART
	Master	192.168.1.158	CONNECTED	UniFi AP-In Wall	3.5.1.4088	1d 8h 8m 18s	LOCATE RESTART
	Loft	192.168.1.139	CONNECTED	UniFi AP-In Wall	3.5.1.4088	1d 8h 8m 32s	LOCATE RESTART
	Basement	192.168.1.140	CONNECTED	UniFi AP-In Wall	3.5.1.4088	1d 8h 8m 25s	LOCATE RESTART
	24d43c 94 21-d9	192.168.1.122	CONNECTED	UniFi AP-Outdoor+	3.5.1.4088	3d 17h 22m 54s	LOCATE RESTART
	Pro-roamtest2	192.168.1.164	CONNECTED	UniFi AP-Pro	3.5.1.4088	1d 8h 20m 25s	LOCATE RESTART
	Pro-roamtest	192.168.1.141	CONNECTED	UniFi AP-Pro	3.5.1.4088	3d 21h 15m 49s	LOCATE RESTART

3. The System LED on the UniFi Gateway will turn blue to confirm that it is successfully adopted.

Optional WAN Port Configuration via Layer 3

By default, the WAN1 port is set to DHCP so it can be assigned network settings by the service provider. To change the setting, connect a computer directly (or through a switch) to the LAN1 port of the UniFi Gateway.

1. From a web browser, go to: <https://setup.ui.com>

USG-PRO-4 Quick Start Guide



Click for
Table of Contents

× me and Password. Click Sign In.

Setup My UniFi Gateway

This Gateway is currently managed. Please sign in.

Username

Password

✓

SIGN IN



Note: If the UniFi Gateway has not been adopted by a UniFi Controller, the login window will be skipped and the Setup window will appear.

3. Click Edit Configuration to configure the WAN1 port as DHCP, Static IP, or PPPoE.

UniFi

Setup My UniFi Gateway

The Gateway is unable to connect to the Internet.
Please check your configuration.

RETRY

IP Address

Router

DNS Servers

Subnet Mask

EDIT CONFIGURATION

For information on using the UniFi Controller software, refer to the User Guide located on our website at: ui.com/download/unifi

Specifications

USG-PRO-4	
Dimensions	484 x 44 x 164 mm (19.06 x 1.73 x 6.46")
Weight	2.30 kg (5.07 lb)
Networking Interfaces Serial Console Port	(1) RJ45 Serial Port

USG-PRO-4 Quick Start Guide



Click for
Table of Contents

	(2) 10/100/1000 RJ45/SFP Combination Ports
	40W
	Internal AC/DC Power Adapter, 60W (24V, 2.5A)
Supported Voltage Range	110 - 240VAC
LEDs	
System	Status
Data Ports	Speed/Link/Activity
Layer 3 Forwarding Performance	
Packet Size: 64 Bytes	2,400,000 pps
Packet Size: 512 Bytes or Larger	4 Gbps (Line Rate)
Processor	Dual-Core 1 GHz, MIPS64 with Hardware Acceleration for Packet Processing
System Memory	2 GB DDR3 RAM
On-Board Flash Storage	4 GB
Rackmount	Yes
Operating Temperature	-10 to 45° C (14 to 113° F)
Operating Humidity	10 to 90% Noncondensing
Certifications	CE, FCC, IC

Safety Notices

1. Read, follow, and keep these instructions.
2. Heed all warnings.
3. Only use attachments/accessories specified by the manufacturer.



WARNING: Failure to provide proper ventilation may cause fire hazard. Keep at least 20 mm of clearance next to the ventilation holes for adequate airflow.



WARNING: To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.



WARNING: Do not use this product in location that can be submerged by water.



WARNING: Avoid using this product during an electrical storm. There may be a remote risk of electric shock from lightning.

Electrical Safety Information

USG-PRO-4 Quick Start Guide



result in improper operation, damage to the equipment or pose a fire hazard if the limitations

Click for
Table of Contents



or serviceable parts inside this equipment. Service should be provided only by a technician.

3. This equipment is provided with a detachable power cord which has an integral safety ground wire intended for connection to a grounded safety outlet.
 - a. Do not substitute the power cord with one that is not the provided approved type. Never use an adapter plug to connect to a 2-wire outlet as this will defeat the continuity of the grounding wire.
 - b. The equipment requires the use of the ground wire as a part of the safety certification, modification or misuse can provide a shock hazard that can result in serious injury or death.
 - c. Contact a qualified electrician or the manufacturer if there are questions about the installation prior to connecting the equipment.
 - d. Protective earthing is provided by Listed AC adapter. Building installation shall provide appropriate short-circuit backup protection.
 - e. Protective bonding must be installed in accordance with local national wiring rules and regulations.

Limited Warranty

ui.com/support/warranty

The limited warranty requires the use of arbitration to resolve disputes on an individual basis, and, where applicable, specify arbitration instead of jury trials or class actions.

Compliance

FCC

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions.

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operations of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

ISED Canada

CAN ICES-3(A)/NMB-3(A)

Australia and New Zealand

USG-PRO-4 Quick Start Guide



Click for 
Table of Contents

CE marking on this product represents the product is in compliance with all directives that are applicable to it.



WEEE Compliance Statement

Declaration of Conformity

Online Resources



© 2020 Ubiquiti Inc. All rights reserved.